



## Arming and disarming

Whenever the car is locked or unlocked, either with the remote control or at the door lock, the alarm system is armed or disarmed at the same time.

Even when the alarm system is armed, you can open the luggage compartment lid/tailgate by pressing the  button on the remote control, see page 31. When you close the luggage compartment lid/tailgate subsequently, it will be locked and monitored.

 Opening certain national-market versions via the door lock triggers off the alarm. ◀

## Switching off alarm

- ▶ Unlock the car with the remote control, see page 28, or
- ▶ Insert the remote control into the ignition as far as it will go, see page 56.

## Indicator lamp displays



- ▶ The indicator lamp beneath the inside mirror flashes steadily: the system is armed.
- ▶ The indicator lamp flashes after the car has been locked: the doors, luggage compartment lid/tailgate or rear window\* have not been closed properly. Even if an item is not closed fully, the remaining items are dead-locked and the indicator lamp begins to flash steadily after 10 seconds. However, the interior movement detector is not activated.
- ▶ The indicator lamp goes out after the car has been unlocked: no attempt was made to tamper with the car during your absence.

- ▶ If the indicator light flashes after unlocking until the remote control is inserted in the ignition, but for no longer than approx. 5 minutes: an attempt was made to tamper with the car.

## Tilt alarm sensor

The car's angle is monitored. The alarm is set off for instance if an attempt is made to steal the car's wheels or tow it away.

## Interior movement detector


Before the interior movement detector can operate correctly, the windows and glass roof\* must be closed.

## Avoiding false alarms

The tilt alarm sensor and the interior movement detector can be switched off together. This prevents false alarms, e.g. in the following situations:

- ▶ In two-level garages
- ▶ When the car is being transported by auto-rail
- ▶ If pets are to remain inside the car

## Switching off the tilt alarm sensor and interior movement detector

Press the  LOCK button on the remote control again immediately after locking the car.

The indicator lamp comes on briefly, then continues to flash steadily. The tilt alarm sensor and interior movement detector are switched off until the car is next unlocked and locked.

## Comfort access\*

Comfort access enables you to access your car without having to take the remote control into your hand. It is sufficient to have the remote control on your person, for example in a jacket pocket. The car automatically recognises your remote control when it is in the immediate vicinity or inside the car.

Comfort access supports the following functions:

- ▷ Unlocking/locking the car
- ▷ Starting the engine
- ▷ Comfort closing

## Operating requirements


- ▷ The car can only be locked once it has ascertained that the remote control on your person is not inside the car.
- ▷ About two seconds have to elapse before the car can again be unlocked and locked.
- ▷ The engine can be started only when the car ascertains that the remote control on your person is inside the car.


## Special features in contrast to conventional remote control

Generally speaking, it makes no difference whether you control the functions outlined above by using comfort access or by pressing the buttons on the remote control. Consequently, you should begin by familiarising yourself with the instructions for opening and closing, starting on page 26.

The features specific to comfort access are described below.


## Releasing

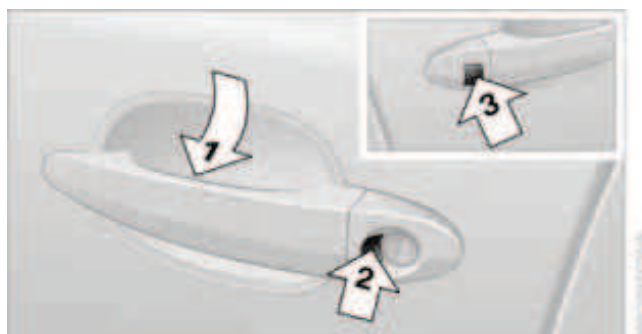


Take a firm hold of one of the door handles, arrow 1. This corresponds to pressing the  button.

When a remote control is detected inside the passenger compartment after the car has been unlocked, the electric steering wheel lock disengages, see page 56.

## Locking


Touch the area, arrow 2 on the driver's door or 3 on the other doors, for approx. 1 second. This corresponds to pressing the  LOCK button.

For comfort closing, press the area, arrow 2 or 3 with your finger.

 If the car detects a remote control which has been left in the luggage compartment/load area accidentally once the luggage compartment lid/tailgate has been closed, the lid will reopen. The hazard warning system flashes and a signal\* sounds. ◀

## Switching on radio readiness

Lightly touching the start/stop button switches on radio readiness, see page 56.

 Do not depress the brake, otherwise the engine will start immediately. ◀

## Starting the engine

You can start the engine or switch on the ignition when a remote control is inside the car. It is not necessary to insert the remote control in the ignition lock, see page 56.

If you take the remote control with you when you leave the car with the engine running, a warning light will come on. In addition, a message will appear on the control display. As long as the car does not detect a remote control, once the engine has been switched off, you will not be able to restart it for approx. 10 seconds.

## Switching off the engine, automatic transmission

The engine can be switched off only when the selector lever is in position P, see page 58.

To switch off the engine with the selector lever in position N, the remote control must be in the ignition lock.

## Before driving a car with automatic transmission into a car wash

1. Insert the remote control in the ignition lock.
2. Depress the brake.
3. Engage selector lever position N.
4. Switch off the engine.

The car will be able to roll.

## Malfunction

Comfort access may malfunction as a result of interference from local radio signals. In this case, open or close the car using the buttons on the remote control or the key. You can subsequently start the engine by inserting the remote control into the ignition lock.

## Changing the battery

The battery in the remote control for comfort access requires replacement from time to time.

1. Remove the integrated key from the remote control, see page 26.
2. Remove the cover.



3. Insert a new battery with the plus side up.
4. Press the cover back into position.



Dispose of the old battery only at an authorised collecting point or hand it in to BMW Service. ◀

## Windows



Observe the windows during the closing procedure, to avoid any injuries.

Take the remote control with you when you leave the car, otherwise children, for example, could operate the windows and possibly injure themselves. ◀

## Opening, closing



- ▶ Press the switch until the pressure point is felt:  
The window is opened for as long as you press the switch.
- ▶ Press the switch beyond the pressure point:  
The window opens automatically. Press the switch again to halt the opening movement.

Close the window similarly by pulling the switch.

For comfort operation using the remote control or door lock, see page 28 or 30.

Comfort closing with comfort access see Locking on page 36.

## After the ignition is switched off

You can still operate the windows for approx. 1 minute after the remote control has been removed or the ignition switched off.

## Trap protection

If the closing force of a window exceeds a specific value as it closes, the closing action is interrupted immediately and the window reopens slightly.



Despite the trap protection function, make sure that the windows are not obstructed as they close; if this precaution is