
*Necessary preliminary tasks:*


- Remove storage compartment .
- Remove audio system controller /  
Car Communication Computer .
- Remove trim panel for pedal assembly .
- Remove right glovebox with housing .

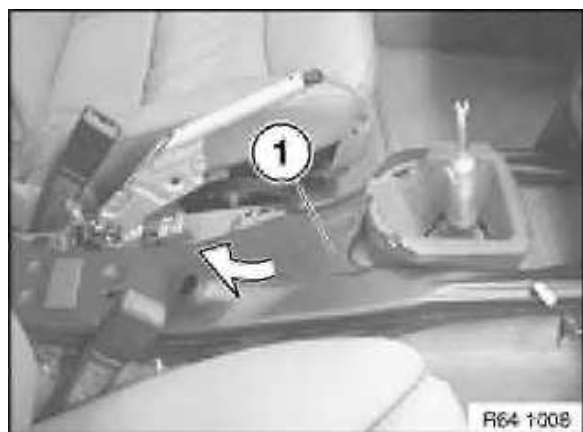

Disconnect rear compartment air duct (1) in direction of arrow.

*Installation:*

Make sure rear compartment air duct (1) is correctly seated.

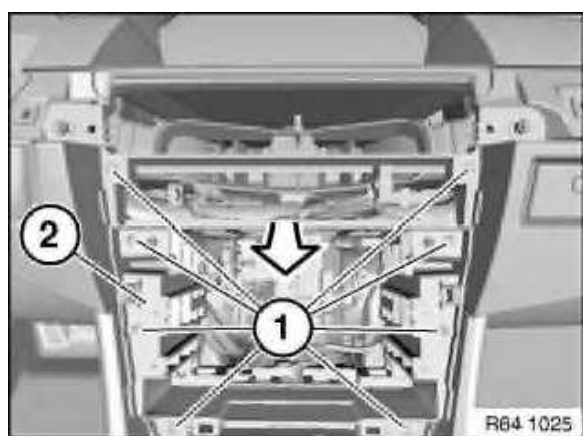


Release screws (1).

Remove middle function carrier (2) in direction of arrow.

*Installation:*

Make sure middle function carrier (2) is correctly seated.

Ensure correct cable routing.

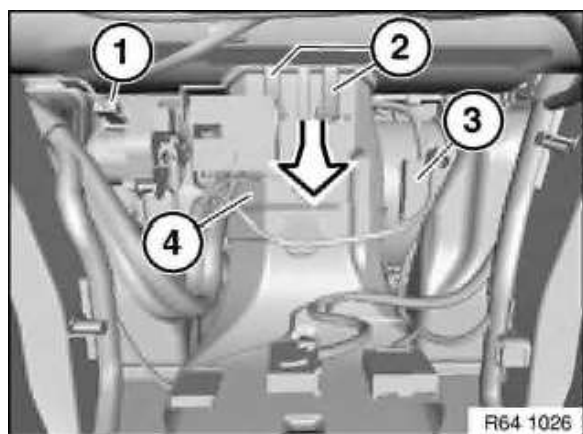*Necessary preliminary tasks:*

- If necessary, remove temperature sensor for cold-air distributor.

Unfasten plug connection (1) and disconnect.


Release clips (2).

Unfasten plug connection (3) and disconnect.

Remove rear compartment air duct (4) in direction of arrow.

*Installation:*


Make sure rear compartment air duct (4) is correctly seated.

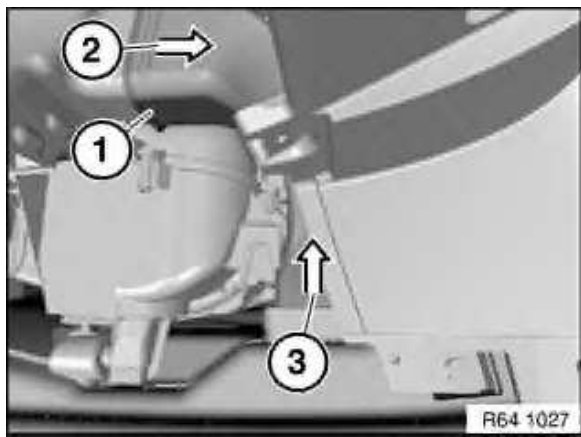

Disconnect left air duct (1) in direction of arrow (2) and (3).

*Installation:*


Make sure right air duct (1) is correctly seated.

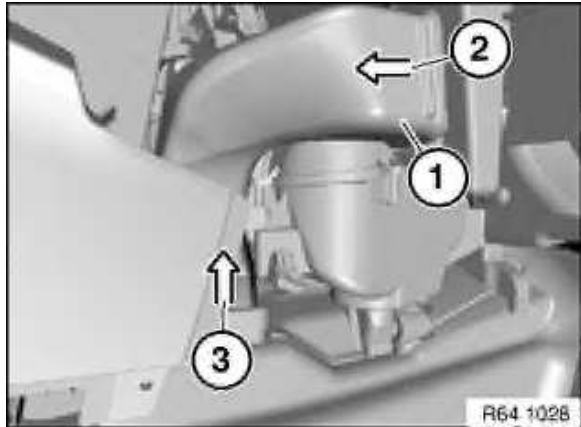

Disconnect right air duct (1) in direction of arrow (2) and (3).

*Installation:*

Make sure right air duct (1) is correctly seated.

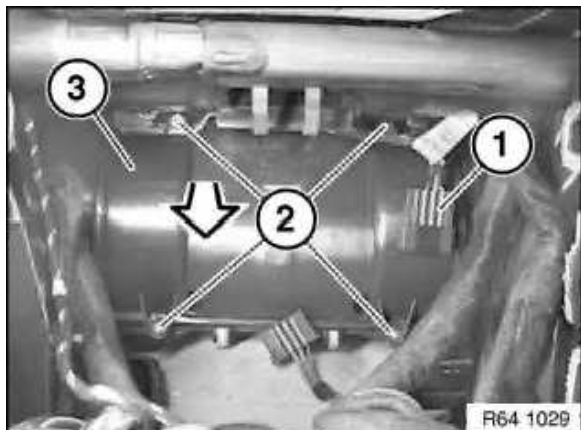

Unlock plug (1) and remove.


Release screws (2).

Remove cover (3) in direction of arrow.

*Installation:*

Ensure correct cable routing.

Make sure seal is correctly seated in cover (3).

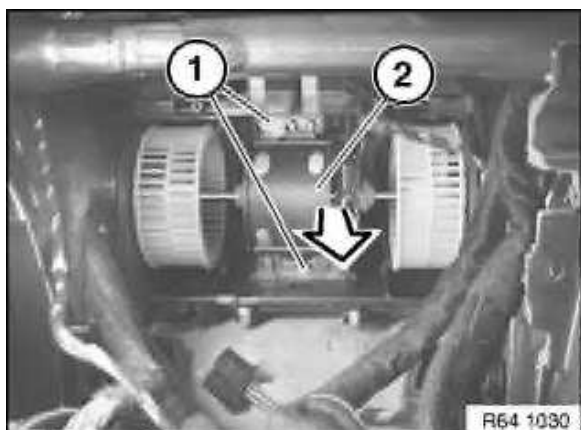


Release screws (1).

Remove fan for heater - A/C unit (2) in direction of arrow.

*Installation:*

Make sure fan for heater - A/C unit (2) is correctly seated.

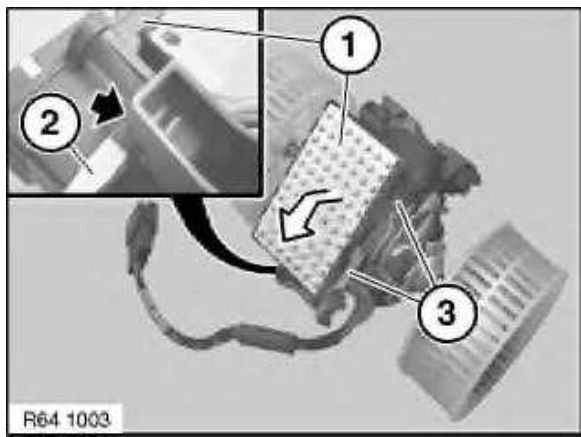

#### Replacement:

Unlock controller for heater - A/C unit fan (1) with a suitable screwdriver (2) and remove.

Unlock plug connections (3) and disconnect.

#### *Installation:*

Make sure controller for heater - A/C unit fan (1) is correctly seated.