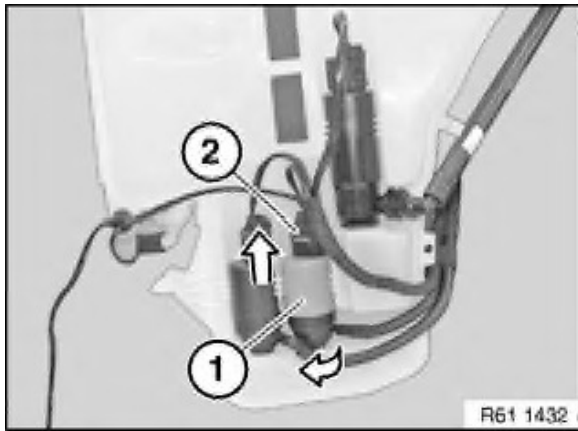
*Necessary preliminary tasks:*

- Release fluid reservoir for windscreen washer system and pull out


*Note:*

Catch any escaping washer fluid if necessary.

Disconnect plug connection (2).

Detach hose from windscreen washer pump (1).

Turn windscreen washer pump (1) and pull in direction of arrow out of fluid reservoir for windscreen washer unit.

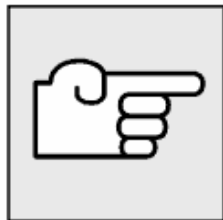*Installation:*

- Replace strainer for windscreen washer pump
- Coat sealing ring of windscreen washer pump with antiseize agent
- Lay hose of windscreen washer pump without kinks
- Fill fluid reservoir