

A204a Boot lid lift

Plug connector overview

| Number | X-pin, colour | Description |
|--------|-----------------|-----------------------------------|
| X1771 | 15-pin, natural | Component connector Boot lid lift |

Pin assignments at plug connector X1771

| Pin | Type | Description / Signal type | Connection / Measuring notes |
|-----|------|---------------------------------------|---|
| 1 | A | Pump signal, boot lid/tailgate open | Hydraulic pump, automatic boot lid/tailgate |
| | | | |
| 2 | | Not used | |
| | | | |
| 3 | M | Ground | Ground point |
| | | | |
| 4 | E | Signal, boot lid contact | Connector X1297 |
| | | | |
| 5 | A/E | CAN bus high | CAN-bus connector |
| | | | |
| 6 | A | Pump signal, boot lid/tailgate closed | Hydraulic pump, automatic boot lid/tailgate |
| | | | |
| 7 | | Not used | |
| | | | |
| 8 | | Not used | |
| | | | |

| | | | |
|----|-----|---|--|
| 9 | A | Supply, angle of rotation sensor, automatic boot lid/tailgate | Angle of rotation sensor, automatic boot lid/tailgate |
| | | | |
| 10 | E | Signal, angle of rotation sensor, automatic boot lid/tailgate | Angle of rotation sensor, automatic boot lid/tailgate |
| | | | |
| 11 | E | Rear lid open signal | Interior boot lid/tailgate button, automatic boot lid/tailgate |
| | | | |
| 12 | A/E | CAN bus low | CAN-bus connector |
| | | | |
| 13 | M | Sensor ground | Angle of rotation sensor, automatic boot lid/tailgate |
| | | | |
| 14 | A | Signal, hydraulic valve, automatic boot lid/tailgate | Hydraulic pump, automatic boot lid/tailgate |
| | | | |
| 15 | E | Supply, terminal 30 | Fuse F76 |
| | | | |