


63 31 015 Removing and installing/replacing left or right interior light


Special tools required:

- [00 9 317](#)

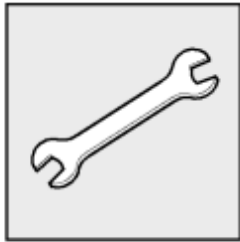

Important!

Follow instructions for [handling light bulbs \(interior lights\)](#).

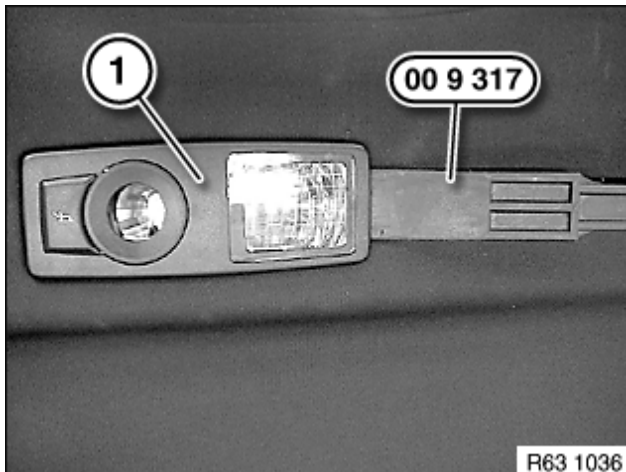

Lever out interior light (1) with special tool [00 9 317](#). Disconnect plug connection underneath and remove interior light (1).

Replacement:

- If necessary, convert [bulbs](#).
- Note [bulb type](#)

