
*Necessary preliminary tasks:*

- Remove footwell side trim panel on A-pillar on right .
- If necessary, remove trim for instrument panel at bottom right


*Note:*

Open glovebox.

Unclip pin (1) from retaining strap (2).

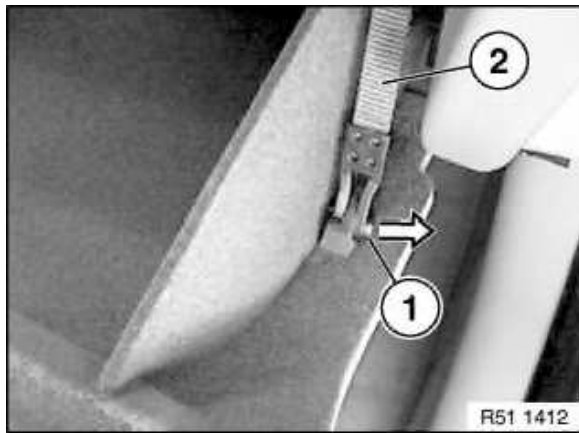

Unclip pin (1) from shock absorber (2).

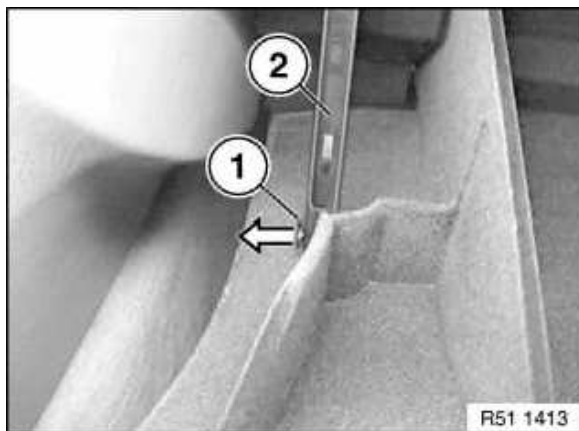

Release screws (1).

Release screws (2) and pull back right glovebox with housing (3).

Disconnect associated plug connections and remove right glovebox with housing (3).

