




Teile und Zubehör - Einbauanleitung

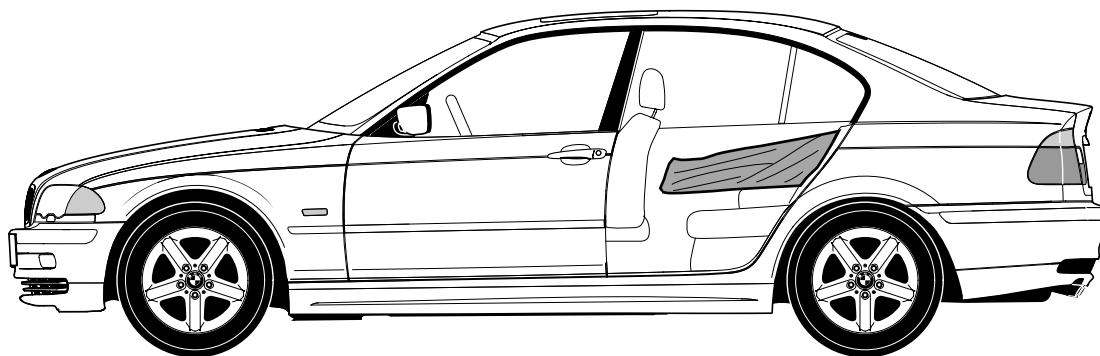

F 46 72 016

BMW Parts and Accessories - Installation Instruction

Ski Bag

BMW 3 Series, saloon (E 46/4)

Ski Bag

BMW 3 Series, saloon (E 46/4)

Technical knowledge is required.
Installation time approx. 1.5 hours, which can vary according to the condition and fittings of the vehicle.

The working steps enumerated in these installation instructions for assembly of the ski bag must be complied with unconditionally. The ski bag is so constructed that with proper fitting and operation no damage can result to the vehicle.

BMW accepts no liability for damage which occurs as a result of not following the work sequence and safety instructions. In addition, any warranty claim against BMW AG is extinguished in the event of improper fitting and handling which diverges from the installation and operating instructions.

Required tools and auxiliary materials

Hammer
Flat tip screwdriver
1/2" ratchet with SW 20
Punch
Tape measure
Carpet knife
Felt-tip marker

Contents

Section

1. Dismantle rear-seat set
2. Making the cut in the trim panel
3. Create cut-out for ski-bag cassette
4. Insert ski-bag cassette
5. Fitting the security screw

1. Dismantle rear-seat set

F 46 72 017

Remove left and right headrests (1). Detach rear seat bench (2) and rear seat back (3) and remove them from the vehicle.

F 46 72 018

Detach the insulation material (1) of the sound insulation mat along the perforation (2) on the partition wall to the boot, so that the metal sheet is exposed for the purpose of making the opening for the ski-bag cassette.

2. Making the cut in the trim panel

F 46 72 019

Open the boot and remove the floor mat (1). Dismantle the rear trim panel (2) at the partition wall to the interior by undoing the four fastening elements (3) and prising out the centre fastening cap (4).

F 46 72 020

Create the opening (2) for the ski-bag cassette by cutting the dismantled trim panel (1) as shown in the above illustration.

3. Create cut-out for ski-bag cassette

F 46 72 021

Using the punch and hammer along the perforations on the metal sheet (1), knock out the metal sheet section (2).



Deburr the edges of the opening for the ski-bag cassette, straighten them if necessary and paint the areas of bare metal with zinc dust paint. ◀

F 46 72 022

Build back the trim panel (1) with the cut-out into the vehicle from the boot side and secure it with the four fastening elements (2).

4. Insert ski-bag cassette

F 39 72 023

Place the ski-bag cassette (1) in the opening (2) which has been made, putting the underside in first, and then swivelling it upwards until it is heard to engage. Place the floor mat back in the boot.



A check should be made from the inside of the vehicle to see if the locking lugs have engaged properly. It is only by this means that a secure attachment of the ski-bag cassette can be ensured. ◀

5. Fitting the security screw

F 46 72 023

Proceeding from the interior of the vehicle, screw the positioned ski-bag cassette (1) to the vehicle through the partition wall using the supplied self-cutting hexagon head screw (2) and the washer (3) contained in the kit. The tightening torque of the screw (2) is 7 Nm.

Reassemble the vehicle in the reverse order of disassembly.

Please refer to the owner's handbook for your vehicle on how to use the ski bag.

