
*Necessary preliminary tasks:*


- Remove trim for storage compartment
- Remove rear compartment fresh air grille
- If necessary, remove USB/AUX connecting socket

Version with rear console:


- Remove rear console

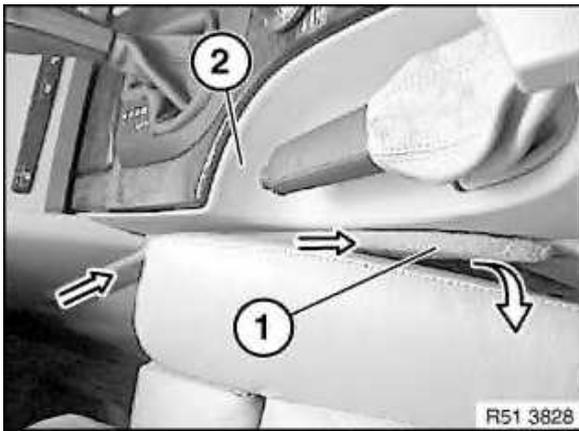


Lever out trims (1) on left/right at rear end and pull out of storage compartment in direction of arrow.

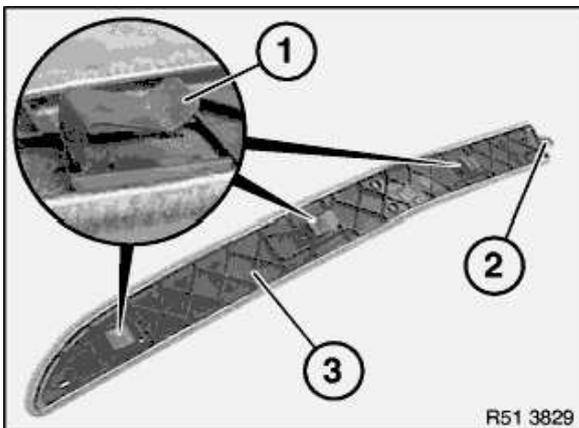*Installation:*

Retainers (1) and guide (2) on trim (3) must not be damaged or missing.

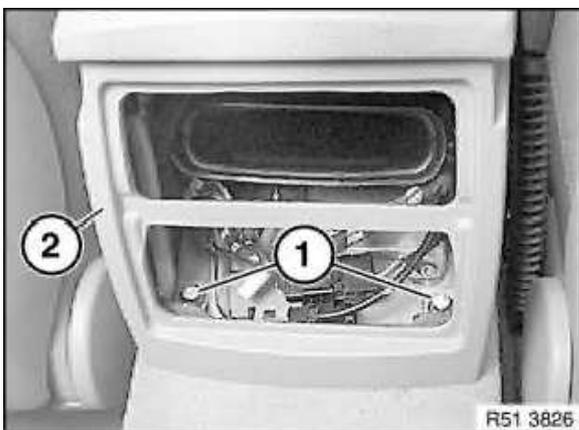


Release screws (1) on storage compartment (2).  
If necessary, unlock plug connections.

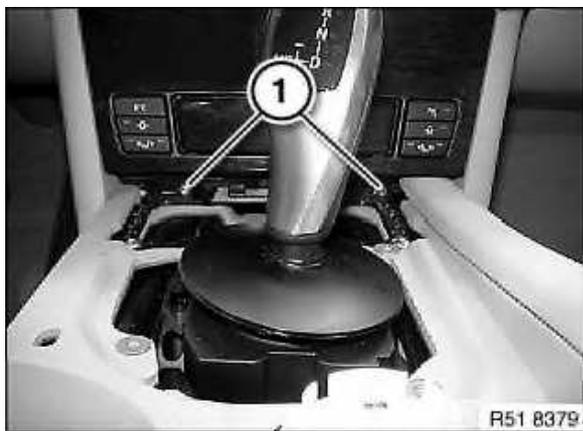

R51 8379

Build date from 03/2007:

Release screws (1).

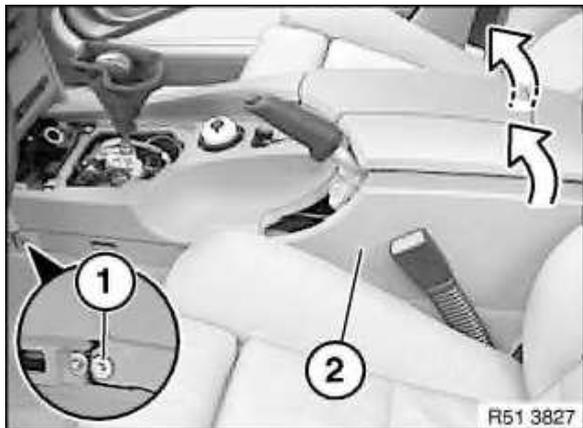


R51 3827

Remove gaiter for handbrake lever.

Release screw (1) on left/right.

Raise storage compartment (2) at rear and disconnect plug connections under storage compartment (2).

Feed out storage compartment (2) in direction of arrow over handbrake lever and gear lever and remove towards rear.

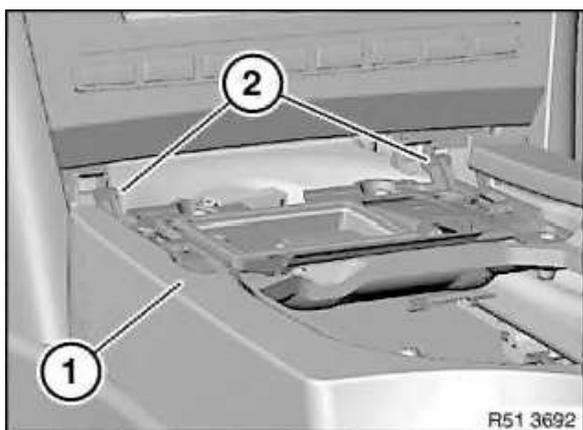

R51 3692

Build date up to 03/2007:

*Installation:*

Do not damage guides (2) when feeding storage compartment (1) in.